

HPWR15028

Spare Part No.	Part No.	Part Name	Easy Damage	Part Picture
HPWR15028-SP-S.B	TS00000247	SOAP BOTTLE	No	
HPWR15028-SP-P.A	TS00000473	Piston-Assy	No	
HPW R15028-SP-I.V	TS00000474	Inlet check valve	No	
HPW R15028-SP-P.T.B	TS00000497	Plain thrust bearing	No	
HPWR15028-SP-W.S	TS00000685	Water Seal	No	
HPWR15028-SP-O.S	TS00000686	Oil Seal	No	
HPWR15028-SP-CAP.	TS00000754	Capaci t or	No	
HPWR15028-SP-S.P	TS00001226	swash plate	No	
HPW R15028-SP-H.V.	TS00001436	high-voltage tube	No	

HPW R15028-SP-P.R.VTS00001605		pressure retaining valve	No	
HPWR15028-SP-NOZZTS00001607		nozzle	No	
HPW V.C.ATS00001861	R15028-SP-	Valve core assembly	No	
HPW R15028-SP-1	AD003000001	Spray Gun	No	
HPW R15028-SP-2	AD003000002	High Pressure Hose	No	
HPW R15028-SP-3	AD003000003	Water Pipe	No	
HPW R15028-SP-4	QX00000003	Quick Connector	No	
HPW R15028-SP-5	AD003000005	Water Connector	No	
HPW R15028-SP-6	AD003000006	pump assembly	No	
HPW R15028-SP-7	AD003000007	Switch	No	
HPW R15028-SP-8	AD003000008	Motor	No	

HPW R15028-SP-9	AD003000009	Rear Housing	No	
HPW R15028-SP-10	A1002000015	Cable 3*0.75mm 2m	No	
HPW R15028-SP-11	AD003000011	Left And Right Housing	No	
HPW R15028-SP-12	AD003000012	Overload Protector	No	
HPW R15028-SP-13	AD003000013	Switch	No	
HPW R15028-SP-14	AD003000014	Left And Right Cover	No	



