 
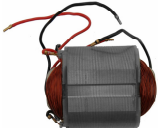 
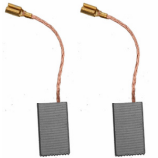 


Spare Part No.	Part No.	Part Name	Easy Damage	Part Picture
ID8508-SP-1	AA004000080	Left-threaded screw M6*25	No	
ID8508-SP-2	AA004000002	Chuck(13m m)	No	
ID8508-SP-3	AA004000045	Output Spindle	No	
ID8508-SP-4	AA004000046	Semicircular Key 3*10	No	
ID8508-SP-5	AA004000047	steel ball 5	No	
ID8508-SP-6	A1016001000	Ball Bearing 6001/C3-Zrs	No	
ID8508-SP-7	AA004000048	circlip 12	No	
ID8508-SP-8	AA004000049	saucer I	No	

ID8508-SP-9	AA004000050	spring1*13.6*23	No	
ID8508-SP-10	AA004000051	saucer II	No	
ID8508-SP-11	AA004G00052	Gear	No	
ID8508-SP-12	AA004000053	Circlip 10	No	
ID8508-SP-13	AA004000054	oil shield	No	
ID8508-SP-14	AA004000055	Support	No	
ID8508-SP-15	AA004000056	Slip Plate Drill/Impact Select	No	
ID8508-SP-16	AA004000057	Drill/Impact Selector	No	
ID8508-SP-17	AA004000058	spring0.5*3.5*9.5	No	
ID8508-SP-18	AA004000059	steel ball 4	No	

ID8508-SP-19	A1010608000	Bearing 608	No	
ID8508-SP-20	AA004R00060	Rotor	No	
ID8508-SP-21	A1010607000	BEARING 607	No	
ID8508-SP-22	AA004S00061	Stator	No	
ID8508-SP-23/36	AA004000062	Right/Left Housing	No	
ID8508-SP-24	AA004000063	Screw ST4.2*16	No	
ID8508-SP-25	AA004000064	screw ST2.9*12	No	
ID8508-SP-26	AA004C00065	Carbon Brush	No	

ID8508-SP-27	AA004W00066	Switch	No	
ID8508-SP-28	AA004000067	Brush Holder	No	
ID8508-SP-29	AA004000068	Spring	No	
ID8508-SP-30	AA004000069	Inductance	No	
ID8508-SP-31	AA004000070	Capaci t or	No	
ID8508-SP-32	AA004000071	screw ST4.2*13	No	
ID8508-SP-33	AA004000072	cord clamp	No	
ID8508-SP-34	AA004000073	Cord protector	No	
ID8508-SP-35	A1002000001	Power cable 2M	No	
ID8508-SP-37	AA004000075	depth gauge	No	

ID8508-SP-38	AA004000076	Auxillary Handle Assembly	No	
ID8508-SP-39	AA004000023	Chunck key	No	

