

WLC30001

Spare Part No.	Part No.	Part Name	Easy Damage	Part Picture
WLC30001-SP-W.P	TS00000613	Water Pump	No	
W LC30001-SP-1	AA048000084	Inner Flange	No	
W LC30001-SP-3	AA048000085	Pad	No	
W LC30001-SP-4	AA048000086	Bearing Block	No	
W LC30001-SP-5	A1016200000	6200RS bearing	No	
W LC30001-SP-6	AA048000087	Big Gear	No	
W LC30001-SP-7	AA048000088	Circlip 35	No	
W LC30001-SP-8	AA048000089	Circlip 15	No	
W LC30001-SP-9	A1013202000	Bearing 3202A-2Rs	No	
W LC30001-SP-10	AA048000090	Grease Seal $\Phi 30 \times \Phi 20 \times 5$	No	
W LC30001-SP-11	AA048000091	Key 4×11	No	
W LC30001-SP-12	AA048000092	Spi ndl e	No	
W LC30001-SP-13	AA048000093	Butterfly Screw M5X10	No	
W LC30001-SP-14	AA048000094	Flip Plate Connection	No	
W LC30001-SP-15	AA048000095	Rubber Stopper	No	

W LC30001-SP-16	W LC30001-SP-17	AA048000096	Wheel GuardNo Loose Nut		
W LC30001-SP-18	W LC30001-SP-19	AA048000097	Cover M6No Side CoverNo		
W LC30001-SP-20	W LC30001-SP-21	AA048000098	Screw M4X14No Outer		
W LC30001-SP-22	W LC30001-SP-23	AA048000099	FlangeNo		
W LC30001-SP-24	W LC30001-SP-25	AA048000100	Hexagon Head Screw		
W LC30001-SP-26	W LC30001-SP-27	AA048000101	M10X2No		
W LC30001-SP-28	W LC30001-SP-29	AA048000102	Side Cover BlockNo Screw		
W LC30001-SP-30	W LC30001-SP-31	AA048000103	M4X10No D-Type HandleNo		
W LC30001-SP-32	W LC30001-SP-33	AA048000104	Outer Hexagonal Bolt M8X13No		
W LC30001-SP-34	W LC30001-SP-35	AA048000105	Screw St4.2X16No Hexagonal		
W LC30001-SP-36	W LC30001-SP-37	AA048000106	Adjusting Gear RNo Regulating		
W LC30001-SP-38	W LC30001-SP-39	AA048000107	Gear RingNo Locking WheelNo		
W LC30001-SP-40	W LC30001-SP-41	AA048000108	Hexagon Head Screw		
W LC30001-SP-42	W LC30001-SP-43	AA048000109	M6X55No		
W LC30001-SP-44	W LC30001-SP-45	AA048000110			
W LC30001-SP-46	W LC30001-SP-47	AA048000111	Gear Box	No	
W LC30001-SP-48	W LC30001-SP-49	AA048000112	Nut M8 (8.8Level)	No	
W LC30001-SP-50	W LC30001-SP-51	AA048G00113	Small Gear	No	
W LC30001-SP-52	W LC30001-SP-53	AA048000114	Locking Wheel Side Cover	No	
W LC30001-SP-54	W LC30001-SP-55	A1016301000	Bearing	No	
W LC30001-SP-56	W LC30001-SP-57	AA048000115	Bearing Cover	No	

W LC30001-SP-37	AA048000116	Rotor	No	
W LC30001-SP-38	AA048000117	Anti-Dust Ring	No	
W LC30001-SP-39	A1016000000	bearing 6000	No	
W LC30001-SP-40	AA048000118	Wind Baffle	No	
W LC30001-SP-41	AA048000119	Screw St4.8X70	No	
W LC30001-SP-42	AA048000120	Flat Washer	No	
W LC30001-SP-43	AA003S00149	Stator	No	
W LC30001-SP-44	AA048000121	Motor Housing	No	
W LC30001-SP-45	AA048000122	Screw M4X12	No	
W LC30001-SP-46	AA003000133	Carbon brush holder	No	
W LC30001-SP-47	AA048000123	Right Brush Cap	No	
W LC30001-SP-48	AA048000124	Soft Start	No	
W LC30001-SP-49	AA048000125	Screw St4.2X30	No	
W LC30001-SP-50/54	AA048000126	Upper/Lower Handle	No	

50/54AA048000126

W LC30001-SP-51	AA048000127	Switch	No	
W LC30001-SP-52	AA048000128	Switch Button	No	
W LC30001-SP-53	AA048000129	Cord Clamp	No	
W LC30001-SP-55	AA048000130	Cord Guard	No	
W LC30001-SP-56	A1002000014	Cable 3*1.0 2m	No	
W LC30001-SP-57	AA048000131	Screw St4.2X10	No	
W LC30001-SP-58	AA003C00131	Carbon Brush	No	
W LC30001-SP-59	AA048000132	Stopcock	No	
W LC30001-SP-60	A1010808000	Needle Bearing 0808	No	

W LC30001-SP-61	A1010608000	Bearing 608	No	
W LC30001-SP-62	AA048000133	Circlip 13	No	
W LC30001-SP-63	AA048G00134	Big Gear	No	
W LC30001-SP-64	AA048000135	Key 4X5X13	No	
W LC30001-SP-65	AA048000136	Tooth Shaft	No	
W LC30001-SP-66	AA048000137	Bottom Assembly	No	
W LC30001-SP-67	AA048000138	Sleeve	No	
W LC30001-SP-68	AA048000139	Hexagon Head Screw	No	
W LC30001-SP-69	AA048000140	M10X2	No	
W LC30001-SP-70	AA048000141	Half-Round Head Square Nut	No	
W LC30001-SP-71	AA048000142	Hexagon Head Screw	No	
W LC30001-SP-72	AA048000143	M6X55	No	
W LC30001-SP-73	AA048000144	Square Nut M4	No	
W LC30001-SP-74	AA048000145	M4X6	No	
W LC30001-SP-75	AA048000146	Hexagon Head Screw	No	
W LC30001-SP-76	AA048000147	M6X55	No	

