

Spare Part No.	Part No.	Part Name	Easy Damage	Part Picture
RH18008-SP-1	AA021000217	Steel Ring17.5*2	No	
RH18008-SP-1-4	TS00005035	Steel ball rack rubber head p	No	
RH18008-SP-1-29	TS00000690	Front Assembly Module	No	
RH18008-SP-1-35/54-94	AA260004629	Straight cylinder and gearbo	No	
RH18008-SP-2	AA021000216	Rubber Head	No	
RH18008-SP-3	AA021000667	Steel Frame	No	
RH18008-SP-4	AA021000219	Spring 30.2*1.8*76	No	
RH18008-SP-5	AA021000220	Inner Hexogon Screw M5*25	No	
RH18008-SP-5-7	AA021001266	Bolt M5×25	No	
RH18008-SP-6	AA021000221	Spring Washer 5	No	

RH18008-SP-7	AA021000222	Washer 5	No	
RH18008-SP-8	AA021000668	Cylinder Case	No	
RH18008-SP-9	AA021000224	Oil Seal Fb35*51*6	No	
RH18008-SP-S-1	AA021000720	Hoop	No	
RH18008-SP-S-1-2/4-7	AA260000080	Auxiliary Handle Ass'y	No	
RH18008-SP-S-2	AA021000721	Screw	No	
RH18008-SP-S-3	AA021000878	Deepth Ruler	No	
RH18008-SP-S-4	AA021000722	T-Shape Screw M8*55	No	
RH18008-SP-S-5	AA021000723	Auxiliary Handle Seat	No	
RH18008-SP-S-6	AA021000724	Nut M6	No	
RH18008-SP-S-7	DD00005665	Auxiliary handle	No	

RH18008-SP-W	TS00000018	Wrench	No	
RH18008-SP-10	AA021000225	Big Washer 45*54.5*1	No	
RH18008-SP-11	AA021000669	Teleflex	No	
RH18008-SP-12	AA021000227	Stell Ball 7.14	No	
RH18008-SP-13	AA021000228	X-ring	Yes	
RH18008-SP-14	AA021000229	X-ring 13*1*4	No	
RH18008-SP-15	AA021000230	Punch Hammer	No	
RH18008-SP-16	AA021000231	Ring 35	No	
RH18008-SP-17	A1016190700	bearing 61907-2RS	No	

RH18008-SP-18	AA021000232	Stell Ball 7.94	No	
RH18008-SP-19	AA021000670	Cylinder	No	
RH18008-SP-19/33	DD00008683	Piston/cylinder	No	
RH18008-SP-20	AA021000234	Flat Key3*3*18	No	
RH18008-SP-21	AA021000235	Plastic Range Ring 47*55*7	No	
RH18008-SP-22	AA021000671	Washer38*47*1.5\	No	
RH18008-SP-23	AA021000672	Spring42*2*40	No	
RH18008-SP-24	AA021000673	Plastic sliding sleeve	No	
RH18008-SP-25	AA021000674	Lock Range Sleeve	No	
RH18008-SP-26	AA021000675	Spring	No	

RH18008-SP-27	AA021000676	Clutch	No	
RH18008-SP-28	AA021000677	Gamp gear	No	
RH18008-SP-29	AA021000239	Ring28*1.6	No	
RH18008-SP-30	AA021000240	Rammer	No	
RH18008-SP-31	AA021000241	O-ring 19*3.1	No	
RH18008-SP-32	AA021000242	Piston Pin	No	
RH18008-SP-33	AA021000243	Piston	No	

 
RH18008-SP-34	AA021000244	Connecting Rod	No	
RH18008-SP-34/35	AA02101265	Connecting Rod/Steel Sleeve	No	
RH18008-SP-36	AA021000678	Inner Cover	No	
RH18008-SP-37	A1016001000	Ball Bearing 6001-RS	No	
RH18008-SP-38	AA021R00679	Rotor	Yes	
RH18008-SP-39	A1010608000	Bearing 608	No	
RH18008-SP-40	AA021000680	Screw ST4.8*65	No	
RH18008-SP-41	AA021000681	Fan Guide	No	
RH18008-SP-42	AA021S00682	Stator	Yes	

RH18008-SP-43	AA021000683	Main House	No	
RH18008-SP-44/46	AA021000930	Brush Holder And Brush Box	No	
RH18008-SP-45	AA021C00685	Carbon Brush	Yes	
RH18008-SP-47	AA021000687	Tail Cover	No	
RH18008-SP-48	AA021000688	Screw St3.9X16	No	
RH18008-SP-49	AA021000689	Screw m5*50	No	
RH18008-SP-50	AA021000690	Damping Rubber	No	
RH18008-SP-51	AA021000691	Rubber Column	No	
RH18008-SP-52	AA021000692	Stell Ball 4	No	

RH18008-SP-53	AA021000693	Third Function Button	No	
RH18008-SP-54	AA021000259	Oil Seal FB19*28*4.5	No	
RH18008-SP-55	AA021000260	Small Gear	No	
RH18008-SP-55-65	AA021001131	Gears Ass'Y	No	
RH18008-SP-56	AA021000261	Washer	No	
RH18008-SP-57	A1016002000	Bearing 6002-RS	No	
RH18008-SP-58	AA021000262	Washer	No	
RH18008-SP-59	AA021000694	Cylindrical trip gear \28KT\39No		
RH18008-SP-61	AA021000696	Tripping Fixed Plate	No	
RH18008-SP-63	AA021000698	Tripping Activity Board	No	
RH18008-SP-64	DD00010449	Disc spring	No	

RH18008-SP-66	A1010627000	Ball Bearing 627-2Z	No	
RH18008-SP-67	AA021000269	Crankshaft	No	
RH18008-SP-68	A1016003000	Bearing6003-RS	No	
RH18008-SP-69	AA021000270	Ring 35	No	
RH18008-SP-70	AA021000271	Ring 17	No	
RH18008-SP-71	AA021G00272	Gear	Yes	
RH18008-SP-72	AA021000273	Spring	No	
RH18008-SP-73	AA021000274	Pin 7*19	No	

RH18008-SP-74	AA021000275	Bearing	No	
RH18008-SP-75	AA021000276	Steel Sleeve	No	
RH18008-SP-76	AA021000277	Key Pin5*5*22	No	
RH18008-SP-77	AA021000278	Ring 47	No	
RH18008-SP-78	AA021001614	Oil Plate	No	
RH18008-SP-79	AA021000280	Bearing 30*47*9	No	
RH18008-SP-80	AA021000701	Gear Box	No	
RH18008-SP-81	AA021000702	Oil Cover	No	

RH18008-SP-82	AA021000703	Vibration Reduction Set	No	
RH18008-SP-83	AA021000704	Spring10.5X1.6X30	No	
RH18008-SP-84	AA021000705	Vibration Damper Plate	No	
RH18008-SP-85	AA021000706	Bolt M8X35	No	
RH18008-SP-86	AA021000707	Dial The Torsion Shaft	No	
RH18008-SP-87	AA021000708	Washer 12.2*17.9*0.5	No	
RH18008-SP-88	AA021000709	Lock Cylinder	No	
RH18008-SP-89	AA021000710	Retaining Spring	No	
RH18008-SP-90	AA021000711	Ring 18	No	

RH18008-SP-91	AA021000712	Two Function Button	No	
RH18008-SP-92-94	AA021001270	Flat Washer4/Spring Washer	No	
RH18008-SP-95	AA021W00716	Switch	Yes	
RH18008-SP-96/99	AA021000717	Right/Left Handle	No	
RH18008-SP-97	AA021000290	Capacitor	No	
RH18008-SP-98	AA021000718	Nut M8	No	
RH18008-SP-100	AA021000292	Cable Board	No	
RH18008-SP-101	AA021000293	Cable Cover	No	
RH18008-SP-102	A1002000027	Cable 2*2.2m	No	

RH18008-SP-103	AA021000511	Screw M8*45	No	
RH18008-SP-A.B	BC00000073	Accessory bag	No	

