 


Spare Part No.	Part No.	Part Name	Easy Damage	Part Picture
ID11008-SP-1	AA004000080	Left-threaded screw M6*25	No	
ID11008-SP-2	AA004000023	Chunck key	No	
ID11008-SP-3	AA004000002	Chuck(13m m)	No	
ID11008-SP-4-F	AA004000045	Output Spindle	No	
ID11008-SP-4	DD00002678	Output Spindle	No	
ID11008-SP-5	AA004000044	3*10Key	No	
ID11008-SP-6	AA004000085	Circlip 32	No	

ID11008-SP-7	A1016002000	Ball Bearing6002/C3-2Rz	No	
ID11008-SP-8	AA004000086	Movable impact gear	No	
ID11008-SP-9	AA004000087	Whisht Lapact Block	No	
ID11008-SP-10	AA004000088	Gear Box	No	
ID11008-SP-11	AA004000089	ScrewST4*20	No	
ID11008-SP-12	AA004000090	Ci rcl i p22	No	
ID11008-SP-13	AA004000091	Oil Shield	No	
ID11008-SP-14	AA004G00092	Gear	No	

ID11008-SP-15	AA004000005	Ci rcl i p12	No	
ID11008-SP-16	AA004000093	Spring	No	
ID11008-SP-17	AA004000094	Seal Ring	No	
ID11008-SP-18	AA004000095	Oil Shield	No	
ID11008-SP-19	AA004000096	Support	No	
ID11008-SP-20	A1010608000	Bearing 608	No	
ID11008-SP-21	AA004R00097	Rotor	No	
ID11008-SP-22	A1010607000	BEARING 607	No	

ID11008-SP-23	AA004000098	Slip Plate Drill/Impact Select	No	
ID11008-SP-24	AA004000099	Steel Ball	No	
ID11008-SP-25	AA004000100	Spring	No	
ID11008-SP-26	AA004000101	Drill/Impact Selector	No	
ID11008-SP-27	A1010607000	BEARING 607	No	
ID11008-SP-28	AA004S00102	Stator	No	
ID11008-SP-29/42	AA004000103	Left/Right Housing	No	
ID11008-SP-30	AA004000084	O Ring	No	
ID11008-SP-32-F	AA004W00066	Switch	No	

ID11008-SP-32	DD00001197W	Switch	No	
ID11008-SP-33	AA004000072	cord clamp	No	
ID11008-SP-34	AA004000105	Screw	No	
ID11008-SP-35	A1002000001	Power cable 2M	No	
ID11008-SP-36	AA004000073	Cord protector	No	
ID11008-SP-37	AA004000064	screw ST2.9*12	No	
ID11008-SP-38	AA004C00106	Carbon Brush	No	
ID11008-SP-39	AA004000107	Brush Holder	No	
ID11008-SP-40	AA004000070	Capacitor	No	

ID11008-SP-41	AA004000108	Screw	No	
ID11008-SP-43	AA004000063	Screw ST4.2*16	No	
ID11008-SP-44	AA004000110	depth gauge	No	
ID11008-SP-45	AA004000111	Auxiliary Handle	No	

