 


Spare Part No.	Part No.	Part Name	Easy Damage	Part Picture
RS3208-SP-1	AA043000049	Bolt M4×16	No	
RS3208-SP-2	AA043000050	Base	No	
RS3208-SP-3	AA043000051	Rubber Rails	No	
RS3208-SP-4	AA043000052	Wind Ring	No	
RS3208-SP-5	AA043000053	Bearing Plate	No	
RS3208-SP-6	AA043000054	Lower bearing seat	No	
RS3208-SP-7	A1016202000	Bearings 6202	No	
RS3208-SP-8	AA043000055	Top chock	No	

RS3208-SP-9	AA043000056	Fan Blade	No	
RS3208-SP-10	AA043000057	Bolt M3×14	No	
RS3208-SP-11	AA043000058	Bearing Plate	No	
RS3208-SP-12	AA043000059	Plain Washer $\Phi 10^* \Phi 16^* 0.5$	No	
RS3208-SP-13	A1016000000	bearing 6000	No	
RS3208-SP-14	AA043000060	Middle Cover	No	
RS3208-SP-15	AA043R00161	Rotor	No	
RS3208-SP-16	AA043000062	Washer $\Phi 8^* \Phi 17^* 0.3$	No	
RS3208-SP-17	A1010608000	Bearing 608	No	
RS3208-SP-18	AA043000063	Bolt St4×14	No	
RS3208-SP-19	AA043000064	Chimney	No	
RS3208-SP-20	AA043000065	Bolt St4×18	No	

RS3208-SP-21	AA043000066	Bolt St4×50	No	
RS3208-SP-22	AA043S00067	Stator	No	
RS3208-SP-23	AA043000068	Chimney	No	
RS3208-SP-24	AA043000069	Housing	No	
RS3208-SP-25	AA043000070	Cord Clip	No	
RS3208-SP-26	AA043000071	Bolt St4×16	No	
RS3208-SP-27	AA010000046	sleeve	No	
RS3208-SP-28	AA043000072	Gearbox Cover	No	
RS3208-SP-29	AA010W00057	Switch	No	
RS3208-SP-30	AA010000056	Switch Cover	No	
RS3208-SP-31	AA043000073	Bolt St3×10	No	

RS3208-SP-32	AA010000054	brush holder	No	
RS3208-SP-33	AA010C00053	Carbon Brush	No	
RS3208-SP-34	AA043000074	Cap	No	
RS3208-SP-35	AA043000075	Elbow plug spring snap faste	No	
RS3208-SP-36	A1002000001	Power cable 2*0.75 2M	No	

RS3208-SP-BS	AAAC0000833	Power cord 2 * 0.75mm ² 2m	No	
RS3208-SP-D.B	TS00001235	dust bag	No	
RS3208-SP-O.B	BC00000818	Outer box	No	
RS3208-SP-C.B.1	BC00000292	Color box	No	
RS3208-SP-D.T.S	TS00001234	Dust the sleeve	No	

