

Spare Part No.	Part No.	Part Name	Easy Damage	Part Picture
RGH9028-SP-1	AA021001151	Dust Cap	No	
RGH9028-SP-1-9	TS00005486	Dust cover/ferrule parts	No	
RGH9028-SP-1-9/102	TS00002191	Card sets of components	No	
RGH9028-SP-2	AA021001152	Snap Ringφ14x1.5	No	
RGH9028-SP-3	AA021001153	Washer16x22x1.6	No	
RGH9028-SP-4	AA021001154	Snap Ringφ19x2	No	
RGH9028-SP-5	AA021001272	Protective Sleeve	No	
RGH9028-SP-6	AA021001156	Washer21x32x4	No	
RGH9028-SP-7	AA021001157	Steel BallC7.14	No	

RGH9028-SP-8	AA021001158	Washer	No	
RGH9028-SP-9	AA021001159	Spring	No	
RGH9028-SP-10	AA021001160	Drill Cover	No	
RGH9028-SP-10-14	AA021001522	Small Drill Cover Ass'y	No	
RGH9028-SP-11	AA021001161	Drill Cover O Ringφ21.5x2	No	
RGH9028-SP-12	AA021001162	Oil Seal	No	
RGH9028-SP-13	AA021001163	Spindle Rod Position Ring	No	
RGH9028-SP-14	AA021001164	Spindle Rod	No	
RGH9028-SP-15	AA021001165	ST4.5X44 Self Tapping Screw	No	
RGH9028-SP-16	AA021001166	Carbon Brush Spring	No	

RGH9028-SP-17	AA021001273	Cylinder Housing	No	
RGH9028-SP-17-23	AA021001523	Cylinder Housing Ass'y	No	
RGH9028-SP-18	AA021001168	Oil Seal 30*41*7	No	
RGH9028-SP-19	AA021001169	BearingHK3012 Sleeve	No	
RGH9028-SP-20	AA021001170	Needle BearingHK3012	No	
RGH9028-SP-21	AA021001171	Needle BearingHK0709	No	
RGH9028-SP-22	AA021001172	9 Dens Washer	No	
RGH9028-SP-23	AA021001173	Self Tapping ScrewST4.2x12No		
RGH9028-SP-24	AA021001174	Outer Flat Ring	No	
RGH9028-SP-24-26/32-43	AA021001524	Drill Cover Ass'y	No	

RGH9028-SP-25	AA021001175	Washer30x43x1.5	No	
RGH9028-SP-26	AA021001176	Spring	No	
RGH9028-SP-27	AA021001177	Model Selector O Ringφ11x2.No	No	
RGH9028-SP-27-31	AA021001525	Model Selector Ass'y	No	
RGH9028-SP-28	AA021001178	Model Selector Iron Core	No	
RGH9028-SP-29	AA021001274	Model Selector Knob	No	
RGH9028-SP-30	AA021001180	Springφ5.8x44	No	
RGH9028-SP-31	AA021001181	Model Selector Button	No	
RGH9028-SP-32	AA021001182	40 Dens Big Gear	No	

RGH9028-SP-33	AA021001183	Drill Cover Position Limited SNo		
RGH9028-SP-34	AA021001184	Connecting Drill Cover	No	
RGH9028-SP-35	AA021001185	Position Pin ϕ 2.5x12	No	
RGH9028-SP-36	AA021001186	Position Retaining Ring	No	
RGH9028-SP-37	AA021001187	Steel Wire Ring ϕ 28x1.5	No	
RGH9028-SP-38	AA021001188	Spindle Set Position Limited SNo		
RGH9028-SP-39	AA021001189	Spindle Set	No	
RGH9028-SP-40	AA021001190	Spindle Set O Ring ϕ 18x3.5	No	
RGH9028-SP-41	AA021001191	Position Limited O Ring ϕ 9.6xNo		
RGH9028-SP-42	AA021001192	Position Limited Cover	No	

RGH9028-SP-43	AA021001193	Inner Steel Wire Springφ28x2No		
RGH9028-SP-44	AA021001194	Piston	No	
RGH9028-SP-44-48	DD00010864	Cylinder assembly	No	
RGH9028-SP-45	AA021001195	Piston O Ringφ15.1x3	No	
RGH9028-SP-46	AA021001196	Cylinder	No	
RGH9028-SP-47	AA021001197	Cylinder Pin Washer	No	 
RGH9028-SP-48	AA021001198	Cylinder Pin	No	

RGH9028-SP-49	AA021001199	Bracket O Ringφ53x7	No	
RGH9028-SP-49-56/67	AA021001526	Bracket Ass'y	No	
RGH9028-SP-50	AA021001200	Bracket Sleeve	No	
RGH9028-SP-51	AA021001201	Bracket	No	
RGH9028-SP-52	AA021001202	Bracket Pressure Fork	No	
RGH9028-SP-53	AA021001203	Bearing O Ringφ23.2x2.4	No	
RGH9028-SP-54	AA021001204	Bearing609	No	
RGH9028-SP-55	AA021001205	Bearing Retainer	No	
RGH9028-SP-56	AA021001206	Screw M4*10	No	

RGH9028-SP-57	AA021001207	Mid Axial	No	
RGH9028-SP-57-60/99	AA260002510	Intermediate shaft shift fork	No	
RGH9028-SP-58	AA021001208	Bearing699	No	
RGH9028-SP-59/60	DD00002440	Model Selector Fork/Spring	No	
RGH9028-SP-59-V1	AA021001209	Model Selector Fork	No	
RGH9028-SP-60-V1	AA021001210	Model Selector Fork Spring	No	
RGH9028-SP-61	AA021001211	Needle BearingHK0910	No	
RGH9028-SP-61/62	AA260002509	Needle roller and swing rod b	No	
RGH9028-SP-62	AA021001212	Away Poled Bearing	No	
RGH9028-SP-63	AA021001213	BearingK15	No	
RGH9028-SP-64	AA021001214	Gear	Yes	

RGH9028-SP-65	AA021001215	Gear Adjusting Spring	No	
RGH9028-SP-66	AA021001216	Spring Seat(Plastic)	No	
RGH9028-SP-67	AA021001217	Position Limited(Iron)WasherNo		
RGH9028-SP-68	AA021001218	Rotor	Yes	
RGH9028-SP-69	AA021001219	Dust Proof Plastic Washer	No	
RGH9028-SP-70	AA021001220	Bearing607	No	
RGH9028-SP-71	AA021001221	Board Against Wind	No	
RGH9028-SP-72	AA021001222	Self Tapping ScrewST3.5x16No		
RGH9028-SP-73	AA021001223	Stator	Yes	
RGH9028-SP-74	AA021001224	Electric Discreteness	No	

RGH9028-SP-75	AA021001225	Marble Set	No	
RGH9028-SP-76	AA021001275	Gear Housing	No	
RGH9028-SP-76/88	TS00005981	Chassis and back cover (pack	No	
RGH9028-SP-77	AA021001227	Spring Piece	No	
RGH9028-SP-78	AA021001228	Carbon Brush Holder	No	
RGH9028-SP-78-80/16	AA260002511	Carbon brush holder compon	No	
RGH9028-SP-79	AA021001229	Spring	No	
RGH9028-SP-80	AA021001230	Carbon Brush	Yes	
RGH9028-SP-81	AA021001231	Stator Insert Line	No	
RGH9028-SP-82	AA021W01276	Switch	Yes	

RGH9028-SP-83	A1002000027	Cable 2*2.2m	No	
RGH9028-SP-85	AA021001234	Protective Sleeve	No	
RGH9028-SP-86	AA021001235	Press Cable Board	No	
RGH9028-SP-87	AA021001236	Self Tapping ScrewST4.2x35No		
RGH9028-SP-88	AA021001277	Back Cover	No	
RGH9028-SP-89	AA021001238	Handle Iron Ring	No	
RGH9028-SP-89-93/95/96	AA021001527	Auxiliary Handle Ass'y	No	
RGH9028-SP-90	AA021001239	T Screw	No	
RGH9028-SP-91	AA021001240	Grip Base	No	
RGH9028-SP-92	AA021001241	Depth Guage Lock Spring	No	
RGH9028-SP-93	AA021001278	Depth Guage Lock	No	
RGH9028-SP-94	AA021001243	Depth Guage	No	

RGH9028-SP-95	AA021001279	Auxiliary Handle	No	
RGH9028-SP-96	AA021001245	Nut M8	No	
RGH9028-SP-97	AA021001246	Self Tapping Screw ST4.2x16No		
RGH9028-SP-98	AA021001247	Self Tapping Screw ST4x16No		
RGH9028-SP-99	AA021001248	Mid Axial Spring	No	
RGH9028-SP-100	AA021001249	Bearing Washer609 9.3x13x0No		
RGH9028-SP-102	AA021001250	Dust Cap Washer 11x17x1	No	
RGH9028-SP-B.B	BC00000473	Blow box	No	
RGH9028-SP-C.B	BC00000414	Color box	No	
RGH9028-SP-D.C	TS00001294	drill chuck	No	
RGH9028-SP-P.M	BC00000474	Product manual	No	

RGH9028-SP-G.B.A	DD00013568	Gear box assy	No	
RGH9028-SP-G.B.A-F	DD00008429	GEAR BOX ASSY	No	

