 


Spare Part No.	Part No.	Part Name	Easy Damage	Part Picture
RH10508-SP-S-1	AA021000725	Square head screw	No	
RH10508-SP-S-2	AA021000726	Hoop	No	
RH10508-SP-S-3	AA021000727	Bracket	No	
RH10508-SP-S-4	AA021000728	U-shape Iron	No	
RH10508-SP-S-5	AA021000729	Auxiliary handle	No	
RH10508-SP-WREN	CTS00001239	wrench	No	
RH10508-SP-BMC	T	BMC	No	
RH10508-SP-C.S	S00003387	color sleeve	No	
RH10508-SP-1	T S00003388 DD00002545	Rubber Head	No	
RH10508-SP-1-25	AA021001735	Front Assembly Module	No	
RH10508-SP-1-F	AA021000216	Rubber Head	No	

RH10508-SP-2	AA021000217	Steel Ring17.5*2	No	
RH10508-SP-3	AA000000079	Steel Frame	No	
RH10508-SP-4	AA021000219	Spring 30.2*1.8*76	No	
RH10508-SP-5	AA021000220	Inner Hexogon Screw M5*25	No	
RH10508-SP-5-7	AA021001266	Bolt M5×25	No	
RH10508-SP-6	AA021000221	Spring Washer 5	No	
RH10508-SP-7	AA021000222	Washer 5	No	
RH10508-SP-8	AA021000223	Cylinder Case	No	
RH10508-SP-9	AA021000224	Oil Seal Fb35*51*6	No	

RH10508-SP-10	AA021000225	Big Washer 45*54.5*1	No	
RH10508-SP-11	AA021000226	T elef lex	No	
RH10508-SP-12	AA021000227	Stell Ball 7.14	No	
RH10508-SP-13	AA021000228	X-ring	Yes	
RH10508-SP-14	AA021000229	X-ring 13*1*4	No	
RH10508-SP-15	AA021000230	Punch Hammer	No	
RH10508-SP-16	AA021000231	Ring 35	No	
RH10508-SP-17	A1016190700	bearing 61907-2RS	No	
RH10508-SP-18	AA021000232	Stell Ball 7.94	No	
RH10508-SP-19	AA021000233	Cylinder	No	

RH10508-SP-20	AA021000234	Flat Key3*3*18	No	
RH10508-SP-21	AA021000235	Plastic Range Ring 47*55*7	No	
RH10508-SP-22	AA021000236	Plastic Cylinder Case57*48.5*No	No	
RH10508-SP-23	AA021000237	Big Spring33.5*3.5*78	No	
RH10508-SP-24	AA021000238	Gear	Yes	
RH10508-SP-25	AA021000239	Ring28*1.6	No	
RH10508-SP-26	AA021000240	Ram m er	No	
RH10508-SP-27	AA021001128	O-ring19*3.1	No	
RH10508-SP-28	AA021000242	Piston Pin	No	

RH10508-SP-29	AA021000243	Piston	No	
RH10508-SP-30	AA021000244	Connecting Rod	No	
RH10508-SP-30/31	AA02101265	Connecting Rod/Steel Sleeve	No	
RH10508-SP-31	AA021000245	Steel Sleeve	No	
RH10508-SP-32	AA021000246	Inner Cover	No	
RH10508-SP-33	A1016001000	Ball Bearing 6001-RS	No	
RH10508-SP-34	AA021R00247	Rotor	Yes	
RH10508-SP-35	A1010608000	Bearing 608	No	
RH10508-SP-36	AA021000248	Fan Guide	No	
RH10508-SP-37	AA021000249	Screw ST4.8*58	No	

RH10508-SP-38	AA021S00250	Stator	Yes	
RH10508-SP-39	AA021000251	Main House	No	
RH10508-SP-40	AA021000252	Tension Spring	No	
RH10508-SP-41/43	AA021000253	Brush Holder/Cap	No	
RH10508-SP-42	AA021C00254	Carbon Brush	Yes	
RH10508-SP-44	AA021000256	Inner Hexogon Screwm5*50	No	
RH10508-SP-45	AA021000257	rubber cylinder	No	
RH10508-SP-46	AA021000258	Third Function Button	No	
RH10508-SP-47	AA021000259	Oil Seal FB19*28*4.5	No	

RH10508-SP-48	AA000000081	Cone gear shaft(10:31)	No	
RH10508-SP-48-57	AA021001267	Second Gear Ass'y	No	
RH10508-SP-49	AA021000261	W asher	No	
RH10508-SP-50	A1016002000	Bearing 6002-RS	No	
RH10508-SP-51	AA021000262	W asher	No	
RH10508-SP-52	AA021000263	Square hole washer14.5*34.5	No	
RH10508-SP-53	AA021000264	Friction Plate 14*35*2	No	
RH10508-SP-54	AA000000082	Gear	Yes	
RH10508-SP-55	AA021000266	Square hole washer14.5*34.5	No	
RH10508-SP-56	AA021000267	Saucer spring16*30*1.8	No	

RH10508-SP-57	AA021000268	NutM10*0.75	No	
RH10508-SP-58	A1010627000	Ball Bearing 627-2Z	No	
RH10508-SP-59	AA021000269	Crankshaft	No	
RH10508-SP-60	A1016003000	Bearing6003-RS	No	
RH10508-SP-61	AA021000270	Ring 35	No	
RH10508-SP-62	AA021000271	Ring 47	No	
RH10508-SP-63	AA021G00272	Gear	Yes	
RH10508-SP-64	AA021000273	Spring	No	

RH10508-SP-65	AA021000274	Pin 7*19	No	
RH10508-SP-66	AA021000275	Bearing	No	
RH10508-SP-67	AA021000276	Steel Sleeve	No	
RH10508-SP-68	AA021000277	Key Pin5*5*22	No	
RH10508-SP-69	AA021000278	Ring 47	No	
RH10508-SP-70	AA021000279	oil Plate	No	
RH10508-SP-71	AA021000280	Bearing 30*47*9	No	
RH10508-SP-72	AA021000281	Screw M4*14	No	

RH10508-SP-73	AA021000282	Double function button compo	No	
RH10508-SP-74-1	AA021000283	O-ring 11*2	No	
RH10508-SP-74	AA021000284	oil cap	No	
RH10508-SP-74/75	AA021001615	oil cap/O-Ring	No	
RH10508-SP-75	AA021000285	O-ring 31.5*2	No	
RH10508-SP-76	AA021000286	Gear Box	No	
RH10508-SP-77	AA021000287	Screw ST3.9*16	No	
RH10508-SP-78	AA021W 00288	Switch	Yes	
RH10508-SP-79	AA021000289	Handle	No	

RH10508-SP-80	AA021000290	Capactitor	No	
RH10508-SP-81	AA021000291	Inductance(Optional)	No	
RH10508-SP-82	AA021000292	Cable Board	No	
RH10508-SP-83	AA021000293	Cable Cover	No	
RH10508-SP-84	A1002000027	Cable 2*2.2m	No	

