 
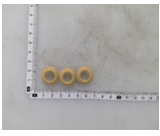 
 


HPWR14008

Spare Part No.	Part No.	Part Name	Easy Damage	Part Picture
HPW R14008-SP-V.A	CC000000074	valve assembly	No	
HPW R14008-SP-C.B	CC000000144	Carbon Brush	No	
HPW R14008-SP-M.S	TS000000020	Micro Switch	No	
HPW R14008-SP-INLET.VAL	TS000000021	Inlet valve	No	
HPW R14008-SP-OUTLET.V	TS000000022	Outlet valve	No	
HPW R14008-SP-W .S	TS000000023	Water Seal	No	
HPW R14008-SP-O.S	TS000000118	Oil Seal	No	
HPW R14008-SP-P.H	TS000000208	Pressure hose	No	

HPW R14008-SP-Q.C	AD001000403	Quick Connector	No	
HPW R14008-SP-I.T	TS00000448	inlte tube	No	
HPW R14008-SP-P.A	TS00000053	Piston-Assy	No	
HPW R14008-SP-P.T.B	TS00000481	Plain thrust bearing	No	
HPW R14008-SP-Q.A	TS00000408	Quick plug connector body a	No	
HPW R14008-SP-D.T	AD001000024	Detergent tank	No	
HPW R14008-SP-D.T.C	AD001000025	Detergent tank cover	No	
HPW R14008-SP-E-3	TS00000125	Gear Box Kit	No	
HPW R14008-SP-E-4	TS00000872	Oil chamber	No	
HPW R14008-SP-E-9	TS00000481	Plain thrust bearing	No	
HPW R14008-SP-E-11	TS00000043	Pump Head Kit	No	
HPW R14008-SP-E-12	TS00000044	Pump Head	No	
HPW R14008-SP-E-13	TS00000022	Outlet valve	No	
HPW R14008-SP-E-15	TS00000045	AI-Valve Plug	No	
HPW R14008-SP-E-16	TS00000021	Inlet valve	No	
HPW R14008-SP-E-17	TS00000023	Water Seal	No	
HPW R14008-SP-E-20	TS00000046	Ylp11 Piston Guider Kit	No	
HPW R14008-SP-E-21	TS00000047	Ylp11 Piston Guider	No	
HPW R14008-SP-E-22	CC000000074	valve assembly	No	
HPW R14008-SP-E-24	TS00001082	inlte tube	No	

HPW R14008-SP-E-25	TS00001083	U-pin	No	
HPW R14008-SP-E-26	TS00000118	Oil Seal	No	
HPW R14008-SP-E-27	TS00000052	Sealing Base	No	
HPW R14008-SP-E-28	TS00000053	Piston-Assy	No	
HPW R14008-SP-E-34	TS00000020	Micro Switch	No	
HPW R14008-SP-E-2	QX00000254	peach shape ring	No	
HPW R14008-SP-E-5	QX00000240	Swash plate 8.2	No	
HPW R14008-SP-E-6	QX00000241	spring washer ϕ 8	No	
HPW R14008-SP-E-7	QX00000242	ST M8*20/ROHS	No	
HPW R14008-SP-E-8	QX00000243	ST5.5*20	No	
HPW R14008-SP-E-10	QX00000244	YLP11 pump +gear box kit+m	No	
HPW R14008-SP-E-18	QX00000245	o-ring 6X2/80HS/ROHS	No	
HPW R14008-SP-E-19	QX00000246	ST M6*8	No	

HPW R14008-SP-E-22	QX00000247	chief valve assy	No	
HPW R14008-SP-E-29	QX00000248	o-ring 60*2.1	No	
HPW R14008-SP-E-30	QX00000249	o-ring 9.5X2.5	No	
HPW R14008-SP-E-31	QX00000250	small spring ϕ 6	No	
HPW R14008-SP-E-32	QX00000251	spring washer6	No	
HPW R14008-SP-E-33	QX00000252	ST M6*55	No	
HPW R14008-SP-E-35	QX00000253	inlet filter	No	
HPW R14008-SP-E-14	TS00000055	O-Ring 9.8X1.9	No	
HPW R14008-SP-ROTOR	TS00001500	ROTOR	No	
HPW R14008-SP-E-23-V1	TS00000048	Passing Valve Kit	No	
HPW R14008-SP-C.P.A	TS00001804	Cleaning pot assembly	No	
HPW R14008-SP-1	AD001000057	Switch button	No	

HPW R14008-SP-2	AD001000058	Front housing	No	
HPW R14008-SP-3	AD001000059	Power cord holder	No	
HPW R14008-SP-4-A	AD001000061	pump assembly	No	
HPW R14008-SP-4-B	AD001000062	Motor	No	
HPW R14008-SP-4	AD001000060	Pump 11 and 8040 motor	No	
HPW R14008-SP-4-C	TS00000767	Whole Pump	No	
HPW R14008-SP-5	AD001000063	Switch box	No	
HPW R14008-SP-6	AD001000017	O-ring, 8.5×1.8	No	
HPW R14008-SP-7	AD001000064	Switch lever	No	

HPW R14008-SP-8	AD001W00015	Switch	No	
HPW R14008-SP-10	AD001000065	Capacitor ass'y 0.2uF	No	
HPW R14008-SP-11	AD001000066	Switch cover	No	
HPW R14008-SP-12	AD001000067	Screw, ST2.9× 1.6	No	
HPW R14008-SP-13	AD001000068	Rear housing	No	
HPW R14008-SP-14	AD001000003	Screw, ST4.8*16	No	
HPW R14008-SP-15	AD001000069	lance holder	No	
HPW R14008-SP-16	AD001000040	Water connector	No	
HPW R14008-SP-17	A1002000038	Cable 2*0.75 5m	No	
HPW R14008-SP-18	AD001000070	Cord cover	No	
HPW R14008-SP-19	AD001000071	Cord clip	No	

HPW R14008-SP-20	AD001000010	Screw,ST3x12	No	
HPW R14008-SP-23	AD001000028	Spray gunNo		
HPW R14008-SP-24	AD001000072	Adjustable spray lance YLG0No		
HPW R14008-SP-25	AD001000030	High pressure hoseNo		

